

Add smooth, sleek
beauty to your
EverGrain® deck.



EG 1•2•3 Hidden Fasteners enable you to create a smooth deck surface for a whole new level of style and sophistication. There's no better way to dramatize the deep grain beauty of EverGrain decking.

Add a stunning effect with a product designed exclusively for EverGrain decking. Choose EG 1•2•3 Hidden Fasteners.



Start with EverGrain® decking.

As the only composite decking made with a compression molding process, EverGrain creates a strong, durable board with stunning wood grain beauty. And now EverGrain features even deeper colors and enhanced weathering characteristics, making it a more attractive choice than ever.

Complement the beauty with TAMKO® railing.


A TAMKO railing system adds the perfect finishing touch. Choose from our seven coordinating choices to complement the beauty of your EverGrain deck.



EverGrain®
Composite Decking

TAMKO

evergrain.com

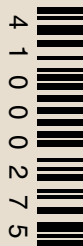

Designed exclusively for EverGrain by **TigerClaw®**
Hidden Deck Fasteners

*To obtain a copy of the limited warranty or product installation instructions, visit evergrain.com or call 1-800-641-4691.

©2009 TAMKO Building Products, Inc. TAMKO is a registered trademark of TAMKO Building Products, Inc. EverGrain is a registered trademark of Epoch Composite Products, Inc. Tiger Claw is a registered trademark of Tiger Claw Inc.

EverGrain®
Composite Decking
TAMKO

EG 1•2•3

Hidden Fastener



Designed exclusively for EverGrain® composite decking.



Why choose **EG 1•2•3**

Hidden Fastener

- Provides an attractive alternative for creating a smooth deck surface
- Designed exclusively for EverGrain® composite decking
- Anticorrosive coated steel for decreased visibility and enhanced performance
- Excellent stability without the bounce and squeak of other hidden fasteners
- Provides excellent hold-down power against wind uplift
- Tested to ASTM E 330
- Easy installation—no special tools required¹
- Formulated for use with EverGrain 1"x6" or 2"x6" deck boards
- Comes with a 15-year limited warranty²



EG 1•2•3—Easy to Install

Step 1



Step 2



Step 3



After first board is installed, lay an inverted deck board in the proper location. With spacer tabs facing downward, attach fasteners with 3/4" screws to deck board directly over joists along Edge 1 (closest to the 1st board). Also attach fasteners to deck board with 3/4" screws along Edge 2 (direction of install) 1" off to the side of joists.

Once fasteners are attached, flip deck board back over. Position board so fasteners can slide beneath the lead edge of previous board.

Confirm proper deck spacing is obtained and fasten 1 1/2" joist screws through fasteners into joists.

Repeat steps 1–3.

*Refer to installation instructions included in each package for complete details.

Coverage Guide

Support Joist Spacing on Center

Deck Size sq. ft.	12"	16"	24"
	Total Fasteners	Total Fasteners	Total Fasteners
100	420 [3] [1]	350 [2] [1]	220 [2] [1]
200	882 [5] [1]	672 [4] [1]	462 [3] [1]
300	1344 [8] [2]	1024 [6] [1]	704 [4] [1]
400	1764 [10] [2]	1344 [8] [2]	924 [6] [1]
500	2226 [13] [2]	1696 [10] [2]	1166 [7] [1]

Fasteners Needed: Number of Boxes Number of Buckets

Available in convenient packaging options for 50 sq. ft. or 350 sq. ft. deck coverage.

